

Manual

In order to clean the filters lift them from their slots and remove **the rings** that hold them in place. After cleaning them, reinstall the rings according to the following drawing.

Filters Removal

