



FILTERPOOL
6μm – 15μm – 30μm



Manual

Polyester fiber filter 6μm – 15μm – 30μm


To clean the filters, follow the steps below:

1. Turn the pump off.
2. Remove the filters from their sockets and remove the rings that hold them (Figure 2).
3. Place the filter onto the special metal support (if you have got it) and rinse with the water hose (Figure 3).
4. Put back the filters onto the filter machine.

Figure 2. Filters removal



Figure 3. Filter Cleaning

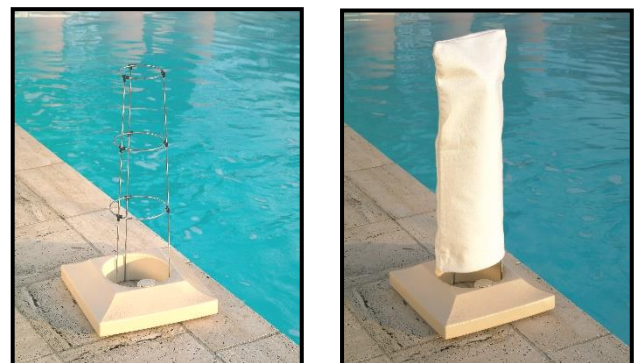

FILTERPOOL
6μm – 15μm – 30μm

